


Setting HitchHiker serial ports for no flow control.

If you wish to set HitchHiker serial ports to 'No flow control', which does not exist is a menu option, proceed as follows –

- Set the serial port flow control to 'Hardware'
- Wire the serial cables to the HitchHiker as shown below. This wiring ties RTS to +12v, and ensures that RS232 data flow cannot be stopped by RTS going false.

This set-up is very useful where communication between the attached equipments is performed by a special protocol. In these cases Xon/Xoff and RTS/CTS flow controls performed by HitchHiker can get in the way.

'No flow control' cable for HitchHiker.

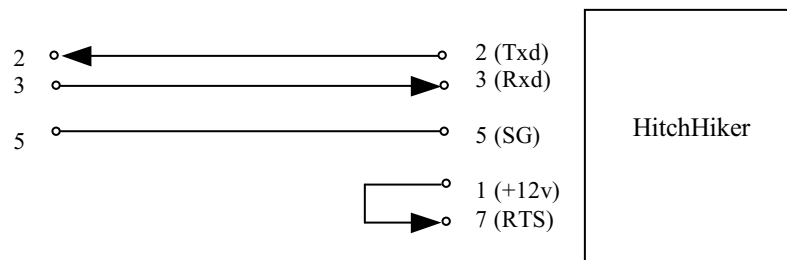

Note – the pin numbers above refer to the D9 connector fitted to HitchHiker, not the more familiar D25 pin numbers.

Mutek 1999.